

SENA SRL2

Mobile Phone Pairing / TFT Display

1. Turn on the SRL2 and press the Center Button for 12 seconds until you hear high-toned double beeps. You will hear a voice prompt saying “**Configuration menu**”.
2. Within 2 seconds, tap the (+) Button until the LED flashes red and blue alternately and you hear multiple beeps. You will hear a voice prompt saying “**Phone pairing**”.
3. Search for Bluetooth devices on your mobile phone. Select the Sena SRL2 in the list of the devices detected on the mobile phone.
4. Enter 0000 for the PIN. Some mobile phones may not ask for the PIN.
5. The mobile phone confirms that pairing has been completed and the SRL2 is ready to use. You will hear a voice prompt from the SRL2 saying “**Your headset is paired**”.
6. If the pairing process is not completed within three minutes, the SRL2 will return to stand-by mode.

4.4 Bluetooth GPS Navigation Pairing

4.4.1 GPS Pairing

1. Turn on the headset and press the Center Button for 12 seconds until you hear high-toned double beeps. You will hear a voice prompt saying “**Configuration menu**”.
2. Within 2 seconds, tap the (+) Button 3 times, then the LED turns to green flashing and the beeps turn to multiple mid-toned beeps. You will hear the voice prompt, “**GPS pairing**”.
3. Search for Bluetooth devices on the GPS navigation screen. Select the Sena SRL2 in the list of the devices detected on the GPS.
4. Enter 0000 for the PIN.
5. The GPS confirms that pairing has completed and the SRL2 is ready to use. You will hear a voice prompt from the SRL2 saying “**Your headset is paired**”.
6. If the pairing process is not completed within three minutes, the SRL2 will return to stand-by mode.